


Women to Be Wrapper Pattern

PUL Waterproof Barrier
When Tracing on PUL,
Tessellate Placement of Pattern
as shown below, with about an inch
between wing sides.

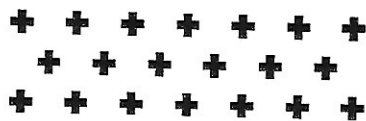

Yield—About 202 W2B Wrappers
per 6 yards PUL





Cut 1 Wrapper Pattern Piece of PUL
Cut 1 Wrapper Pattern Piece of Dark Cotton Fabric
Cut 1 Wrapper Pattern Piece of Light Cotton Fabric

For One W2B Wrapper

Sew the 2 Pockets:



→ Cut out two 5-inch squares of cotton fabric

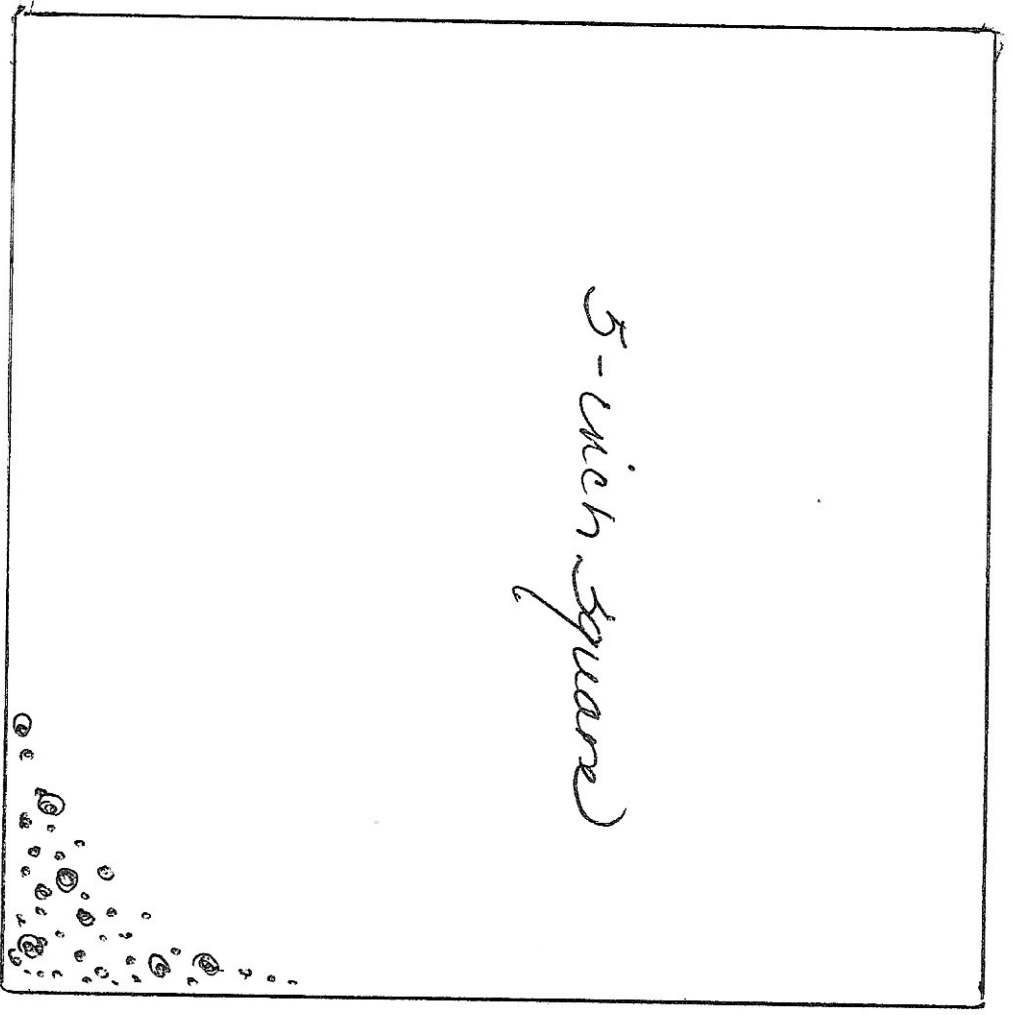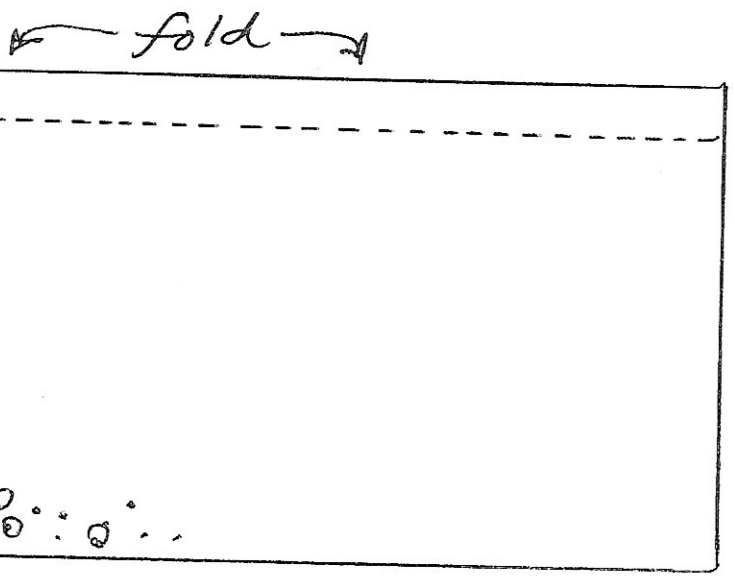


- With wrong sides together, fold each square in half to create a rectangle
- Finger press the fold
- Sew a straight seam along the fold, 1/4-inch away from the folded edge

Layer the W2B Wrapper:


→**Layer 1**---PUL with **SHINY SIDE UP**

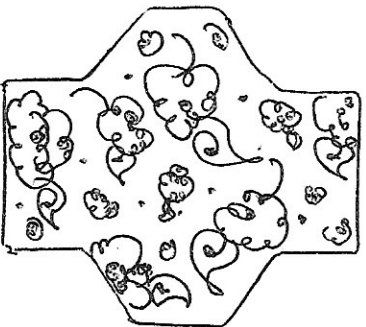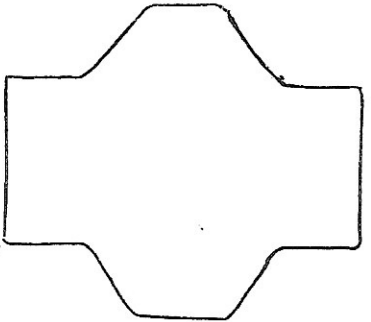

→**Layer 2**---Place the Dark Cotton fabric piece with **RIGHT SIDE UP** over the PUL

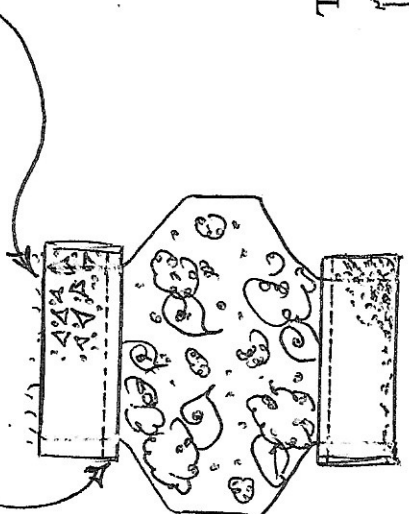

→**Layer 3**---Place the two pocket pieces on each end of the dark cotton with raw edges outward & the pocket fold inward

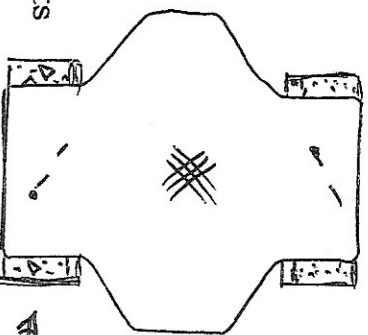


→**Layer 4**---Place the Light Cotton fabric piece with **WRONG SIDE UP** over the pockets

Note: Pins in the cotton pieces **only to hold layers together are fine, but **PUL must not be punctured by pins***



Sew the W2B Wrapper:

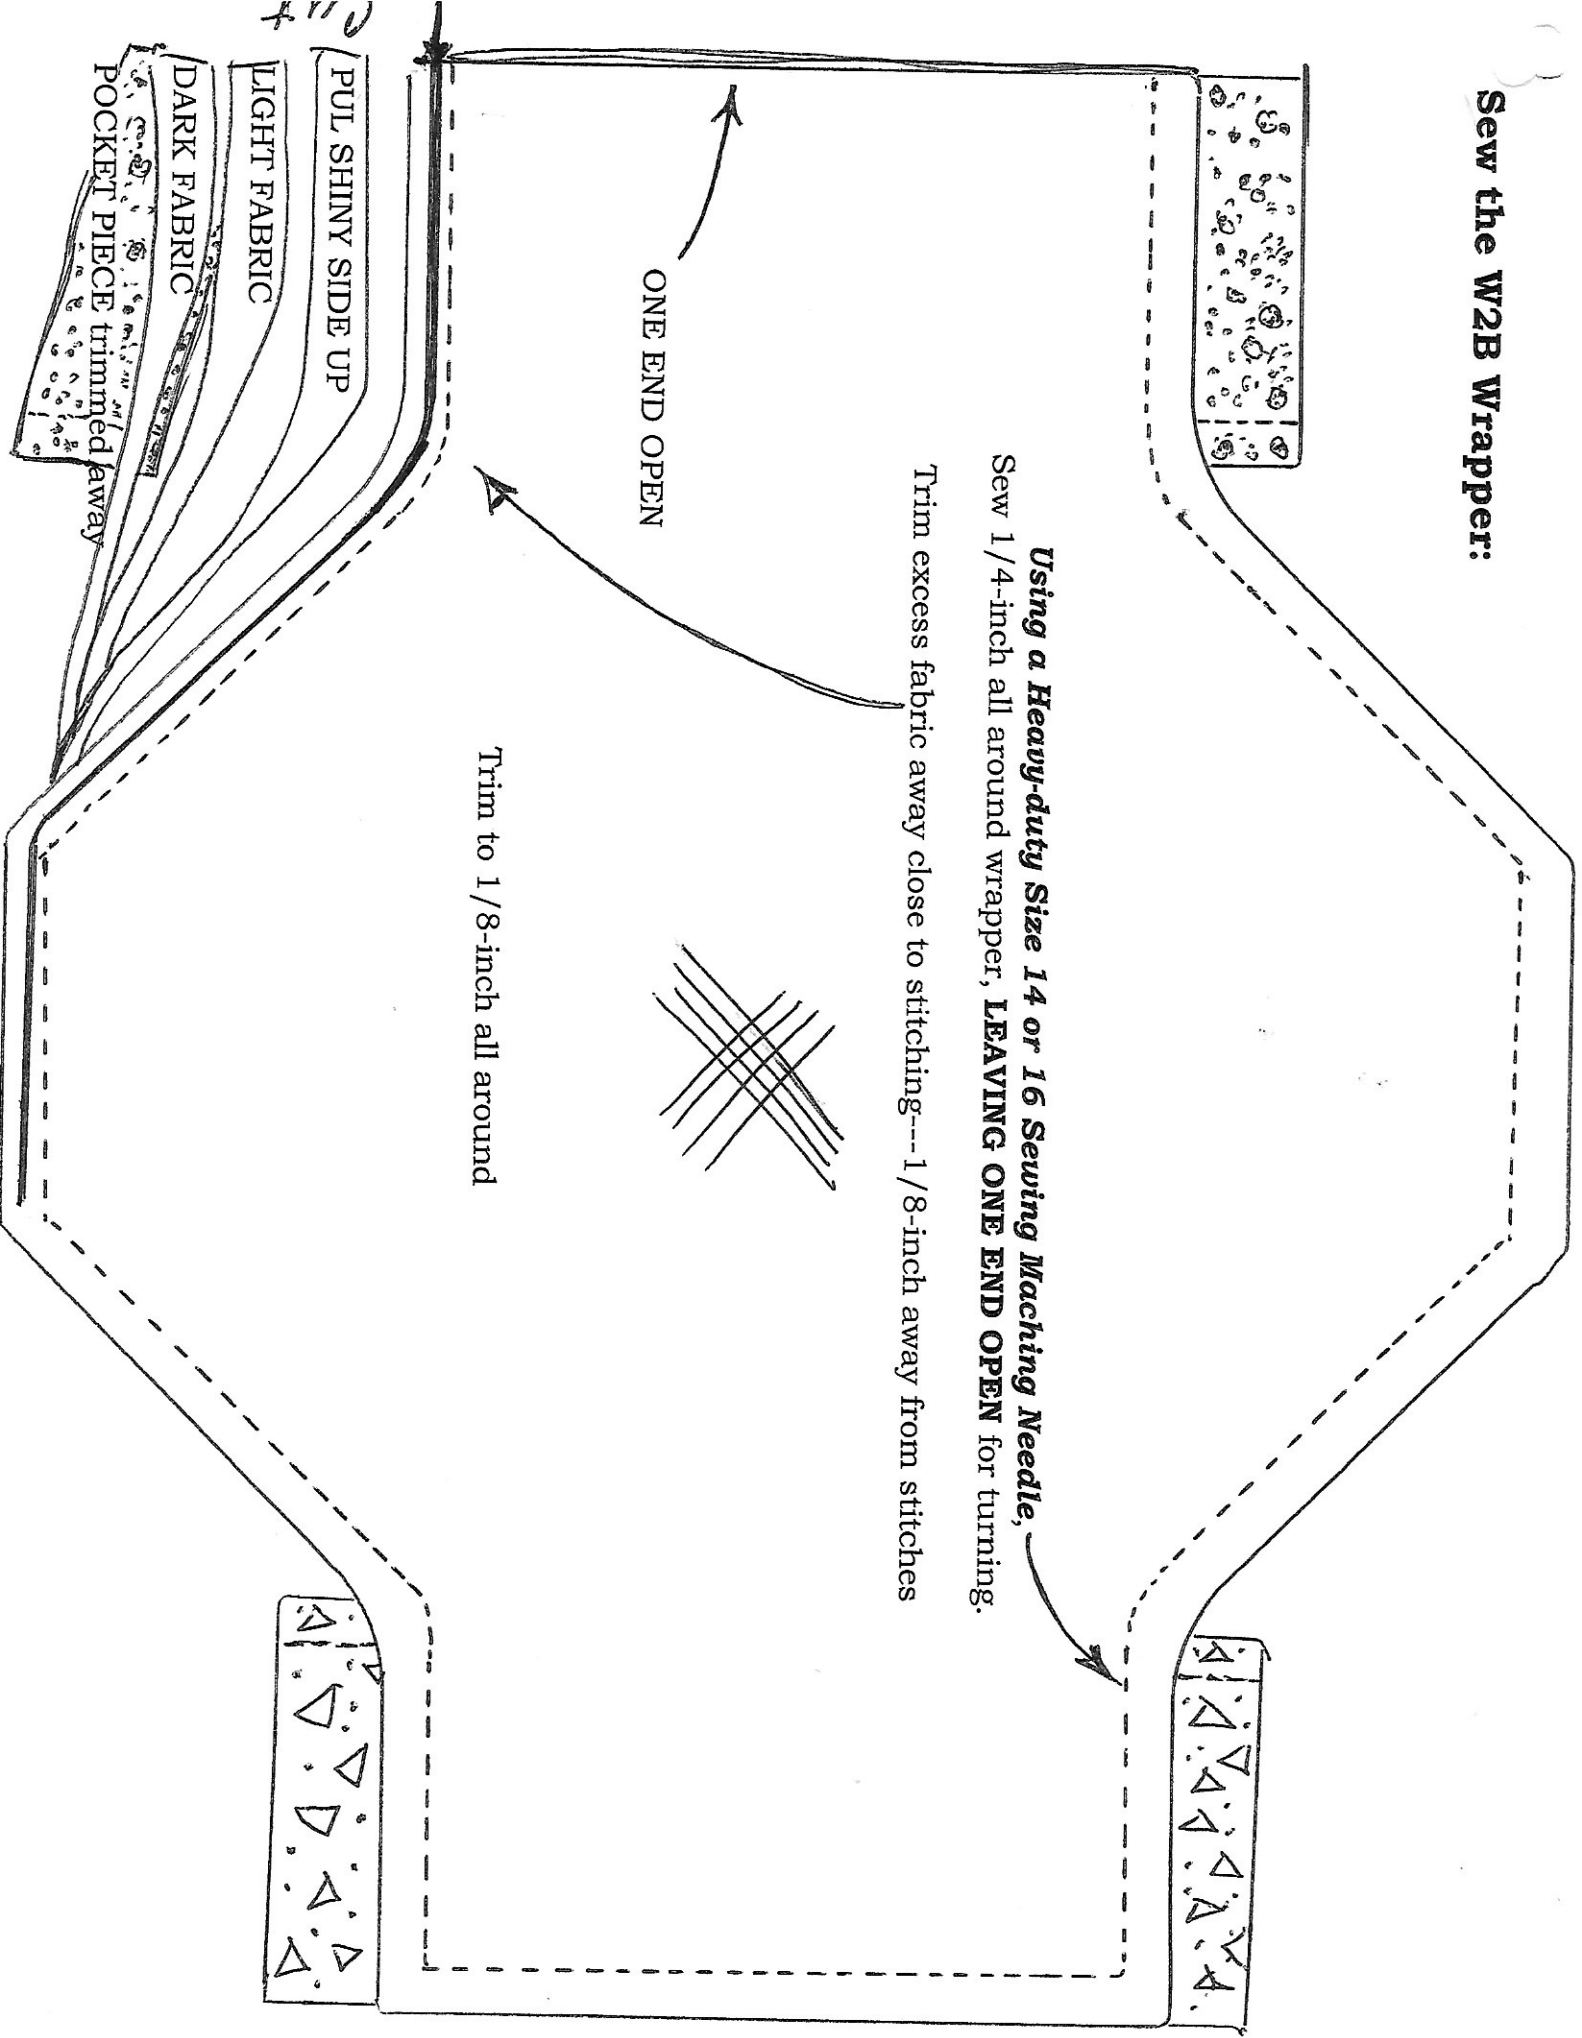


Turn the W2B Wrapper RIGHT-SIDE-OUT:


Cut

Turn wrapper right-side-out [using a pointy tool to push the corners out nicely]
with the pocket on the finished end FLIPPED TO THE DARK SIDE,
BUT the other pocket on the open end, **STILL ON THE UNDERSIDE** on the light side.

Stitch through all layers across the end of the wrapper with 1/4-inch seam.
Trim raw edge to 1/8-inch.

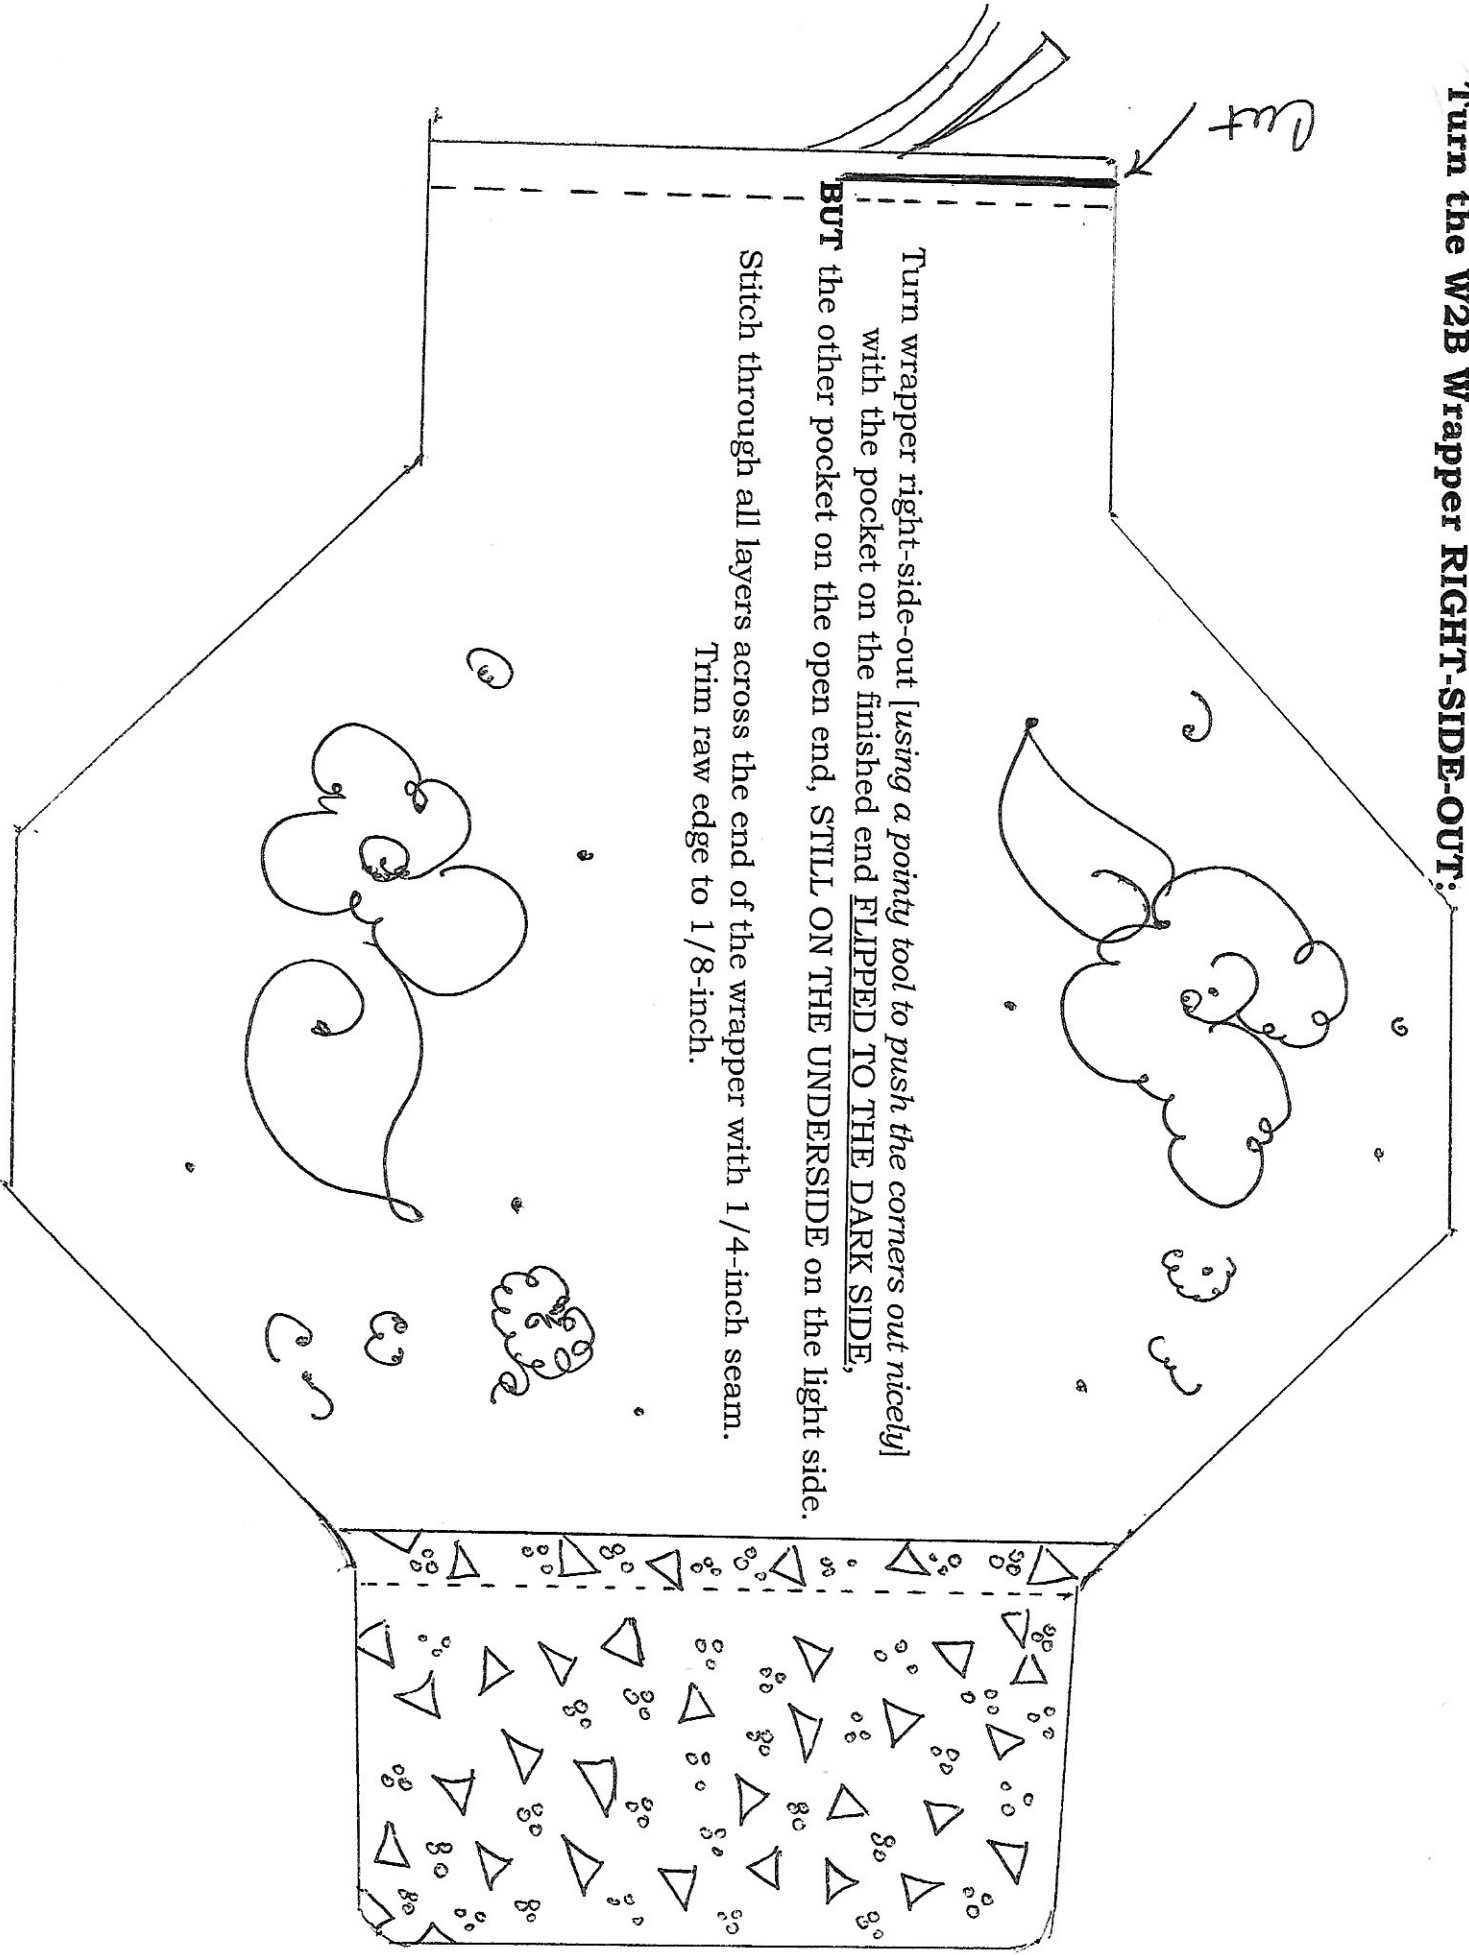

Bring the Pocket up and Top-Stitch all around W2B Wrapper—Apply Snaps:

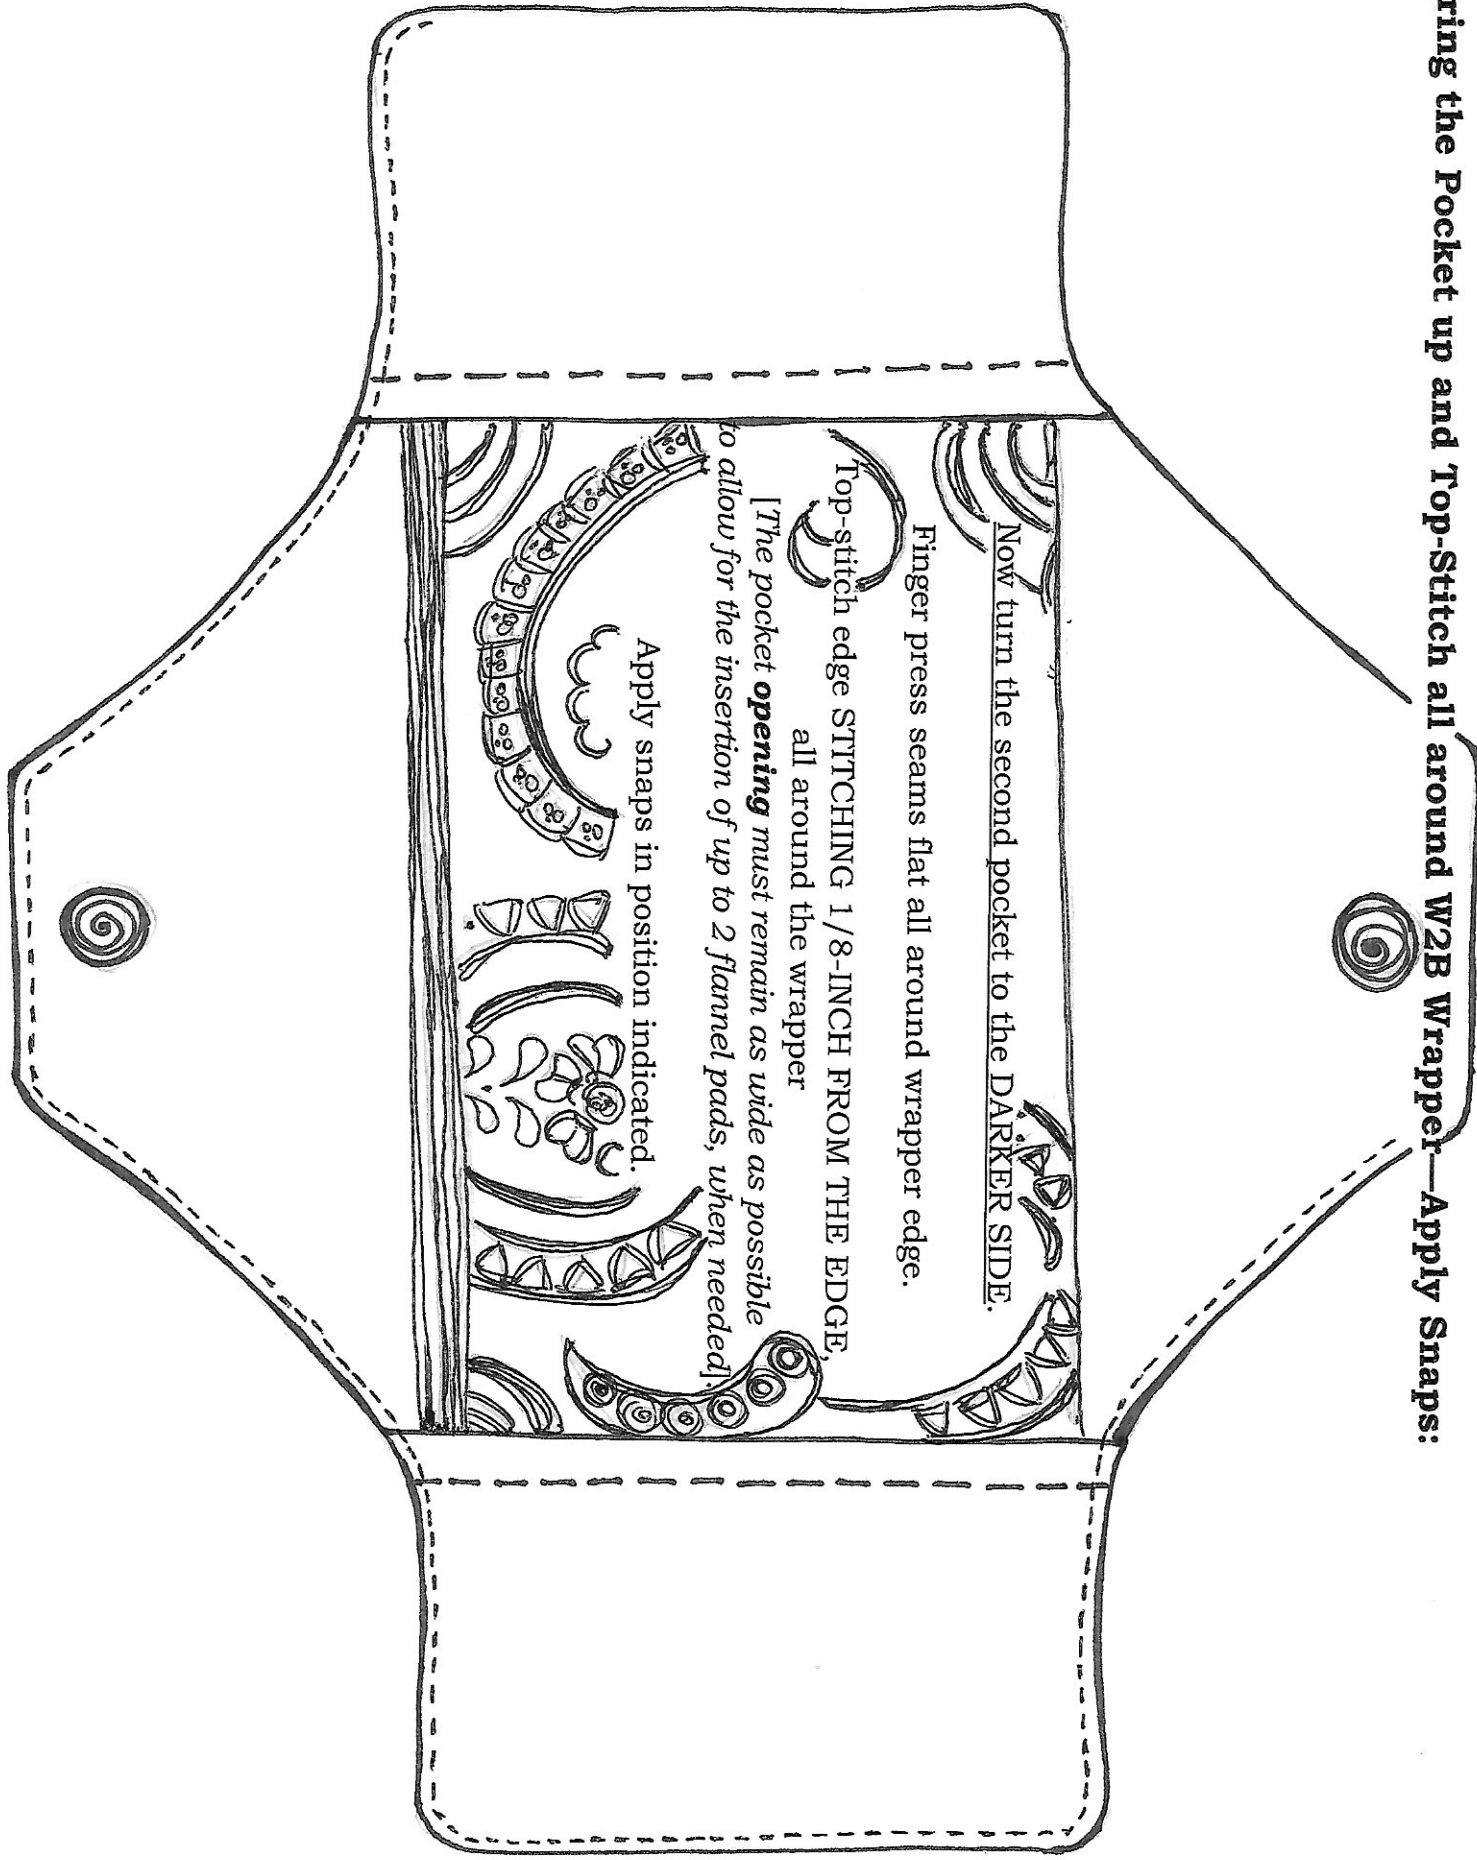

Now turn the second pocket to the DARKER SIDE.

Finger press seams flat all around wrapper edge.


Top-stitch edge STITCHING 1/8-INCH FROM THE EDGE,
all around the wrapper

[The pocket **opening** must remain as wide as possible
to allow for the insertion of up to 2 flannel pads, when needed.]

Apply snaps in position indicated.

For One W2B Pad

Step 1---Place two 9-inch by 9-inch squares of cotton flannel together with right sides together. Sew 1/4-inch seam all around the edge, leaving about 3-inch opening for turning. Trim off excess fabric at corners to reduce bulk.

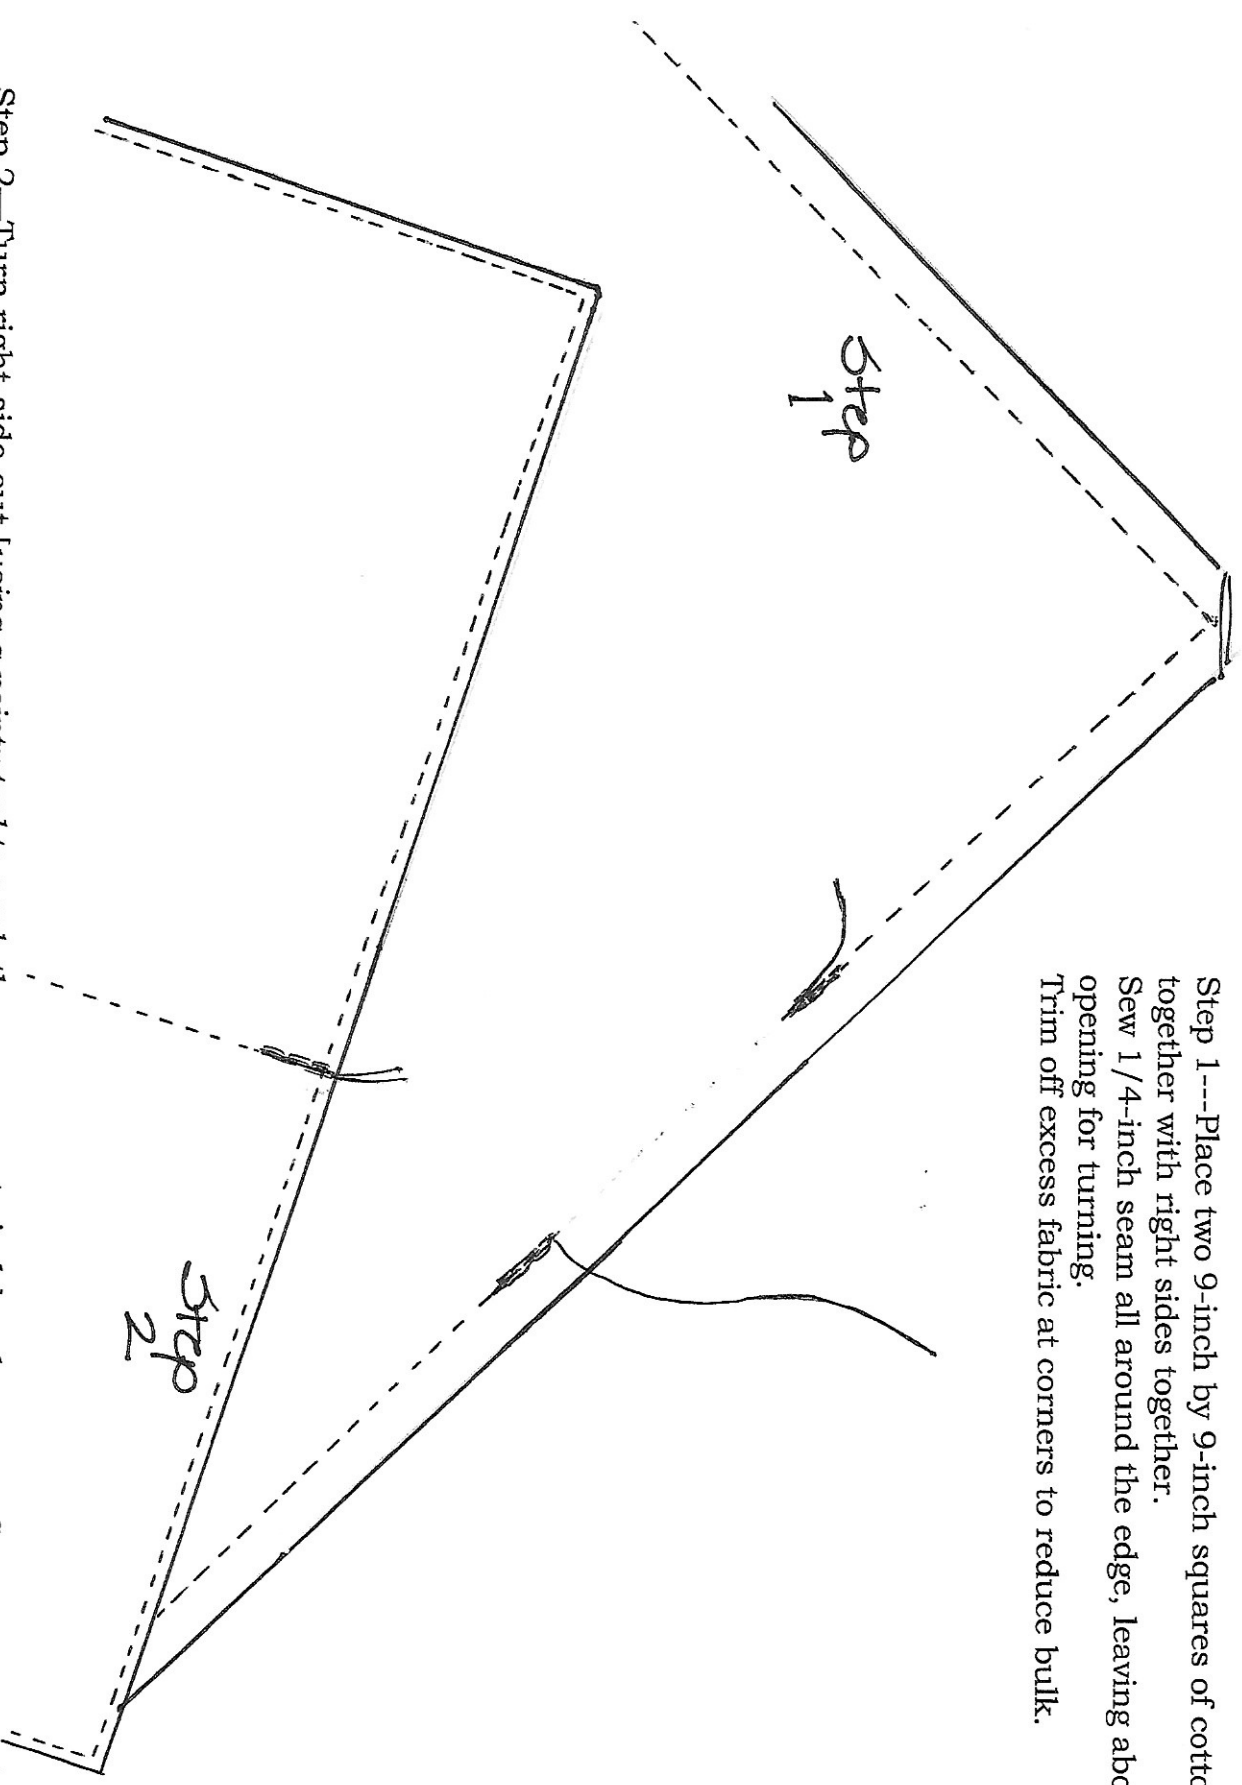

Step 2---Turn right-side-out [using a pointy tool to push the corners out nicely] and press or finger press. Stitch opening closed and continue sewing around the pad edge to top-stitch close to the edge all around. Then sew a line of straight stitching through the center of the pad to prevent shifting of layers. Backstitch to secure your final stitches.